


Canvas Offsets with Screws

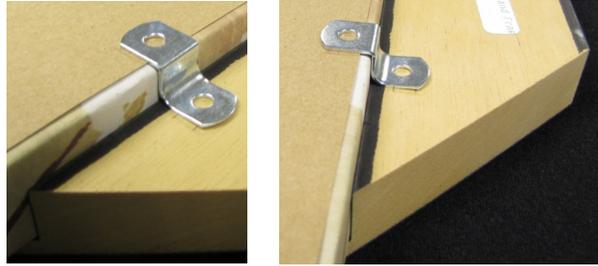

S2730 1/2" Canvas Offsets w/screws

S2731 3/8" Canvas Offsets w/screws

S2732 1/4" Canvas Offsets w/screws

S2733 1/8" Canvas Offsets w/screws

Each bag contains 100 Canvas Offsets and
100 #6 x 3/8 Phillips/Slotted Pan Head Screws

Many times you will find that your canvas extends beyond the rabbet of a picture frame and “sticks out” from the back of the frame. The Canvas Offsets come in four different depths to assist the framer in securing the canvas to the frame.

The Canvas Offsets have two holes for screws. Simply choose the correct depth for your offset, secure one end directly into the frame and the other into the canvas back (be careful to not touch the artwork or any overlapping canvas wrap).

Space the canvas offsets approximately every four to six inches around the frame for a good secure fit.