


# SCREW EYES



S1710=210 1/2    S1707=212 1/2    S1705=214 1/2    S1703=216 1/2

1. Place assembled frame facedown on a safe surface. (Be sure to protect delicate moulding from scratches by laying a soft cloth on the surface.)
2. Measure one third down from the top of the frame on the left side, mark a point for the screw eye. Center hole. Repeat on the right side.

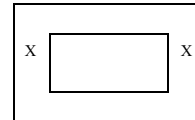

3. Drill a starter hole at each mark.
4. Insert screw eye into starter hole, twist into frame by hand as far as you can go.
5. Utilize a small flat head screwdriver or something similar to insert into the “eye” of the screw eye to continue to twist the screw eye into frame.

6. Cut your wire to 1 1/2 times the length between the two screw eyes.
7. See diagram below for proper wire tying. Be sure that your wire is the proper length before securing it to the second screw eye-pull wire up in the center until you can place it in the middle of the top rail. (This is where it will hang on the wall.)

