



Wedges

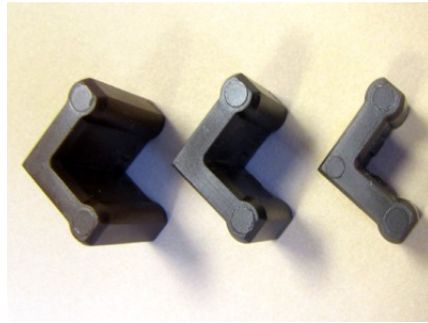


Directions for using wedges:


1. Put wood glue on the inside corners of the top rail and left rail, place the two rails into your corner vise to form a “V”. Be sure the corner is lined up, tighten the vise. Wipe off any excess glue.

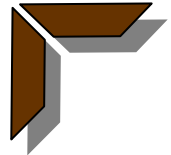

2. Repeat process for the bottom rail and right rail.

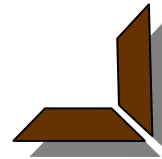

3. After glue has set up, join the two assembled sides together to form your whole frame. Allow the frame to set over night to ensure the glue has dried.

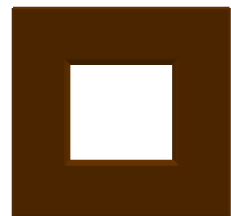

4. Place assembled frame face down on a flat surface. Please be sure to place a cloth on your flat surface to protect the wood moulding finish from scratches. (Optional: Place a small amount of glue in wedging hole before tapping in the wedge.) Gently tap the wedges into the corners of the finished frame with a rubber mallet.

